BT-341-B

RADIO AM/FM-CARGA MANUAL-LUZ DE EMERGENCIA

MANUAL DE INSTRUCCIONES

CARACTERÍSTICAS

FM: 87 - 108 MHz
MW: 520 - 1600 KHz
LED rojo de señal
Linterna con LED blanco
Carga de baterías por USB de móviles, MP3 y MP4, etc.
Adaptador externo Mini USB
Altavoz incorporado
Toma de auriculares 3.5mm.
Alimentación:
- Batería de Ni-MH recargable
- 3xAAA
- Recarga manual por dinamo
- Adaptador externo o vía PC

CONTROLES

FRONTAL

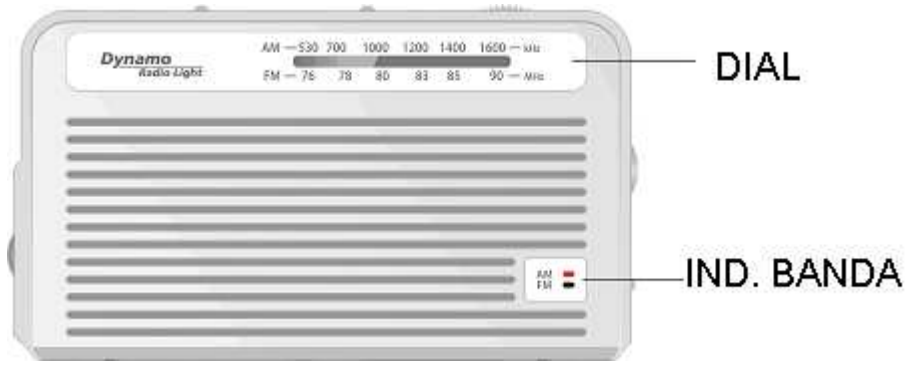

SUPERIOR

DERECHA

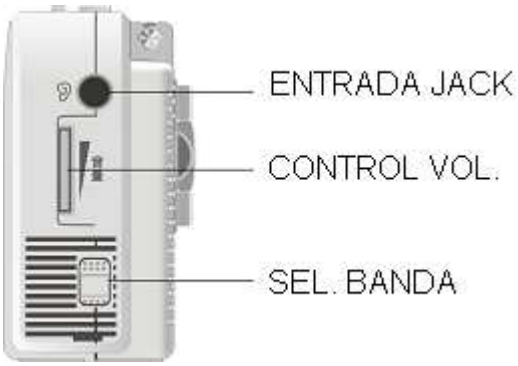

IZQUIERDA

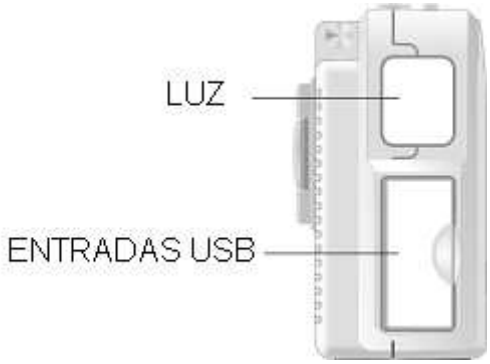

TRASERA

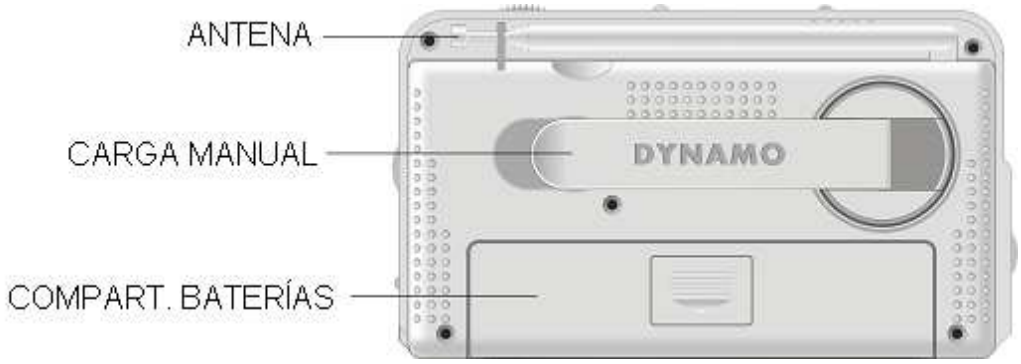

ALIMENTACIÓN

El compartimento de la batería que se encuentra en la parte posterior de la unidad. Cuenta con una batería recargable Ni-MH batería y pilas AAAx3 (no incluidas).

Instalación de la batería recargable Ni-MH

La batería recargable viene desconectada. Antes de utilizar la unidad, abra el compartimiento de la batería y conecte el enchufe de la pila recargable en su zócalo según la dirección correcta.

Instalación de la pilas AAA

Abra el compartimiento de la batería, instale 3 x AAA, observando la polaridad del diagrama.

DINAMO DE CARGA

1. Apague la radio
2. Gire la manivela constantemente para generar electricidad a la batería Ni-MH.

CARGA CON ADAPTADOR (NO INCLUIDO)

1. Apague la radio
2. Conecte un extremo del adaptador a la toma de corriente, conecte el otro extremo en la entrada DC de la unidad. La unidad cargará la batería Ni-MH automáticamente.

NOTA:

1. El tiempo de carga máximo es de 8 horas.
2. Las características del adaptador (no incluido) son 5 clavijas jack, voltaje de salida de 5V y 300mA de corriente de salida o superior.

USB POR PC

1. Apague la radio
2. Conecte la radio al PC a través de un cable USB.

CARGA DE TELÉFONO

1. Utilice el conector correspondiente a su teléfono y conecte el otro extremo a la entrada de la radio.
2. Ajuste el selector a esta posición

OTRAS FUNCIONES

USO DE LA LINTERNA
Ajuste el selector en el icono de la bombilla. Ajuste en la posición OFF para apagarla.

USO DE LA LUZ DE ALERTA
Ajuste el selector a la posición "ALERT", la linterna roja parpadeará. Ajuste el selector a la posición OFF y la luz de alerta se apagará.

USO DE SIRENA
Ajuste el selector a la posición "ALERT", la señal de alerta sonará. Ajuste el selector a la posición OFF y la señal de alerta se apagará.

NOTA: Puede utilizar la linterna, luz de alerta y la sirena en cualquier modo.

ESCUCHAR LA RADIO

1. Encienda la radio pulsando el interruptor de encendido deslizando a la posición batería recargable o pilas.
2. Seleccione FM o AM banda pulsando el interruptor de banda en el panel lateral.
3. Ajuste el volumen al nivel deseado
4. Sintonizar la emisora el selector Tune y prestar atención a la escala del dial.
5. Apagar la radio pulsando el selector hacia la posición OFF.

“Las especificaciones pueden cambiar sin previo aviso”
IMPORTADO
I.R.P., S.L.
AVDA. SANTA CLARA DE CUBA 5
SEVILLA, SPAIN

DECLARACIÓN DE CONFORMIDAD

I.R.P., S.L. declara bajo su responsabilidad que el aparato indicado cumple los requisitos de las siguientes directivas:

DIRECTIVAS EMC
EN55013:2001+A1:2003+A2:2006
EN61000-3-2:2006+A1:2009+A2:2009
EN61000-3-3:2008
EN55020:2007

Descripción del aparato:
Modelo BRIGMTON **BT-341-B**
Radio con altavoz incorporado

Importador: I.R.P., S.L.
Dirección: Avda. Santa Clara de Cuba 5, 41007, Sevilla.

BRIGMTON

BT-341-B

RADIO AM / FM-MANUAL LOAD- EMERGENCY LIGHT

OPERATION MANUAL

KEY FEATURES

FM: 87 - 108 MHz

MW: 520 - 1600 KHz

Red LED Light (Flashes)

Flashlight with one white LED

Cell Phone, MP3 & MP4 Charging Jack (Standard USB Jack)

External Adaptor Jack (Mini USB 5 Pin Jack)

Built-in Speaker

Earphone Jack (D3.5mm)

Power Sources: Ni-MH Rechargeable battery or 3 x AAA dry batteries

Charged by: Cranking Dynamo, External Adaptor, or via PC

BASIC CONTROLS

FRONT

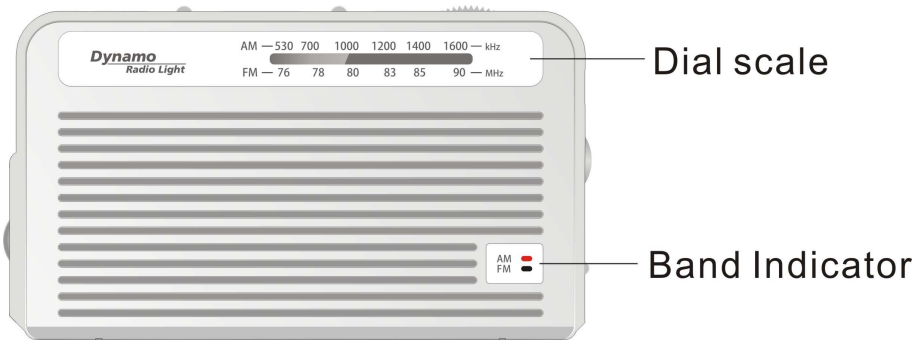

TOP

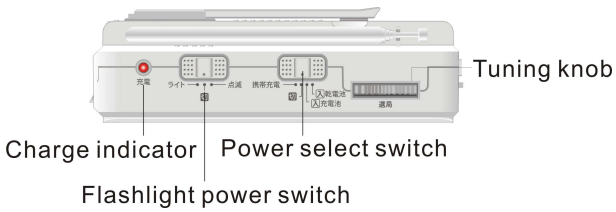

RIGHT

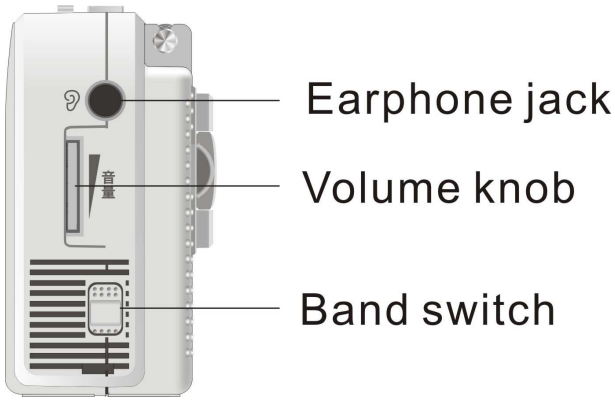

LEFT

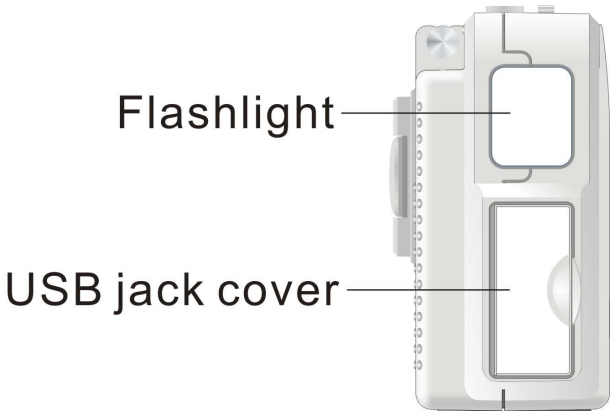

REAR

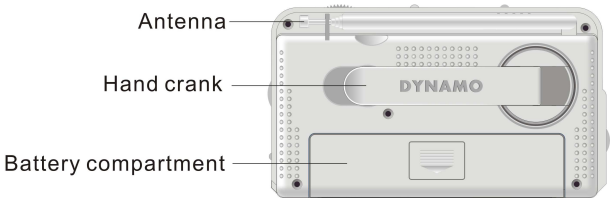

POWER SUPPLY

The battery compartment which is located in the rear of the unit is for both the rechargeable Ni-MH battery and Dry battery.

Installing Rechargeable Ni-MH battery

It has been disconnected for transportation purposes. Before using the unit, please open the battery compartment and connect the rechargeable battery's plug into its socket according to the correct direction.

Installing Dry battery

Open the battery compartment, install 3 x AAA Alkaline batteries observing the battery polarity diagram.

POWER SUPPLY

DYNAMO CHARGING

1. Turn off the radio
2. Turning the hand crank constantly to direct generate electricity to the Ni-MH battery.

ADAPTOR CHARGING (excluded)

1. Turn off the radio
2. Plug one port of the matched adaptor into the AC outlet, plug the other port into the <DC IN Jack> of the unit. The unit will charge the Ni-MH battery automatically.

NOTE:

1. The longest charging time is 8 hours.
2. You can buy a matched adaptor from the market which is with 5 pin jack, 5V output voltage and 300mA output current or above.

USB COMPUTER CHARGING

1. Turn off the radio
2. Connecting the radio and computer via provided USB cable plus connector

CHARGING CELLPHONE

1. Use the cellphone connector which is matched with your cellphone, to connect the included charging cable and your cellphone.

2. Plug the other port of the supplied charging cable into the <PHONE CHARGER Jack> of the unit.

3. Set the <Power Switch> to position.

BASIC OPERATIONS

USING FLASHLIGHT

Set the <LIGHT Switch> to “LIGHT: position, the flashlight will be on. Set the <LIGHT Switch> to "OFF" position, the flashlight will be off.

USING ALERT LIGHT

Set the <LIGHT Switch> to "ALERT" position, the red flashlight will blink. Set the <LIGHT Switch> to "OFF" position, the alert light will be off.

USING SIREN

Set the <LIGHT Switch> to "ALERT” position, the siren will be on. Set the <LIGHT Switch> to "OFF" position, the siren will be off.

NOTE: You can use the FLASHLIGHT, ALERT LIGHT and SIREN in any power mode.

LISTENING TO RADIO

1. Turn on the radio by pushing the “POWER” switch either “NiMH” or “AAA” Dry battery location
2. Select FM or AM band by pushing the band switch on the side panel.
3. Adjust the volume by rotating the <Volume Knob> to your desired level
4. Tuning into the station by rotating the <Tune Knob> and pay attention to display of the frequency dial scale.
5. Turning off the radio by pushing the <Power Switch> to "OFF" position

“Features can change without notice”

IMPORTED
I.R.P., S.L.
AVDA. SANTA CLARA DE CUBA 5
SEVILLA, SPAIN

DECLARATION OF CONFORMITY

I.R.P., SL declare under our responsibility that the equipment meets the requirements indicated in the following directives:

EMC DIRECTIVES

EN55013: 2001 + A1: 2003 + A2: 2006
EN61000-3-2: 2006 + A1: 2009 + A2: 2009
EN61000-3-3: 2008
EN55020: 2007

Description of apparatus:

BRIGMTON Model **BT-341-B**

Radio with built-in speaker

Importer: I.R.P., SL

Address: Avenida Santa Clara de Cuba 5, 41007, Sevilla.